



INSTALLATION INSTRUCTIONS

CARBAHN.COM/INSTRUCTIONS

FENDER LINER MODIFICATIONS FOR WHEEL CLEARANCE

CBB16-24-5470

G8X M2/M3/M4

These instructions assume that the person installing these parts is a *BRAND CERTIFIED MECHANIC* and are *NOT step by step instructions on how to disassemble and reassemble the car.*

DISCLAIMER

Fender screen kit (CBB16-24-5470) will need to be purchased to be able to run Michelin Pilot Sport 4s 295/30R20 (Front) | 305/30R20 (Rear) tires.

The following modifications worked for Michelin Pilot Sport 4s 295/30R20 (Front) | 305/30R20 (Rear) tires, and our ride height and alignment specs.

Michelin Pilot Sport 4s 285/30R20 (Front) | 295/30R20 (Rear) tires, with our ride height and alignment specification, did not require modifications.

MODIFICATIONS MAY VARY DEPENDING ON TIRE BRAND, TIRE SIZE, RIDE HEIGHT, AND ALIGNMENT SPECIFICATIONS

These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT step by step instructions on how to disassemble and reassemble the car.**

FRONT MODIFICATIONS

1. Start by removing the front half of the right and left front fender liners, the cutting procedure is the same for both sides.
2. Mark the outer edge of each fender liner in 2 places as shown, and trim off the plastic material encircled by the marks, Photo #1 and #2.



Photo #1

Mark outer edge of liner for cutting

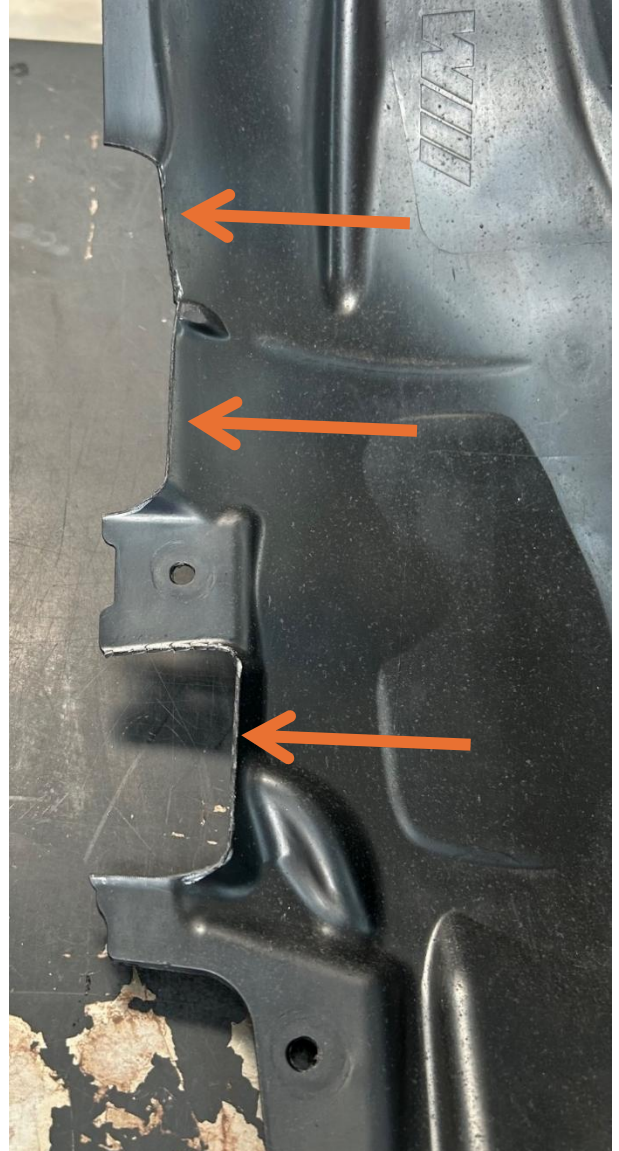


Photo #2

Edge of front liner after cutting

These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT step by step instructions on how to disassemble and reassemble the car.**

3. Next at the front of the liner cut out the 6 outside louvers marked in the photos, Photo #4 and #5

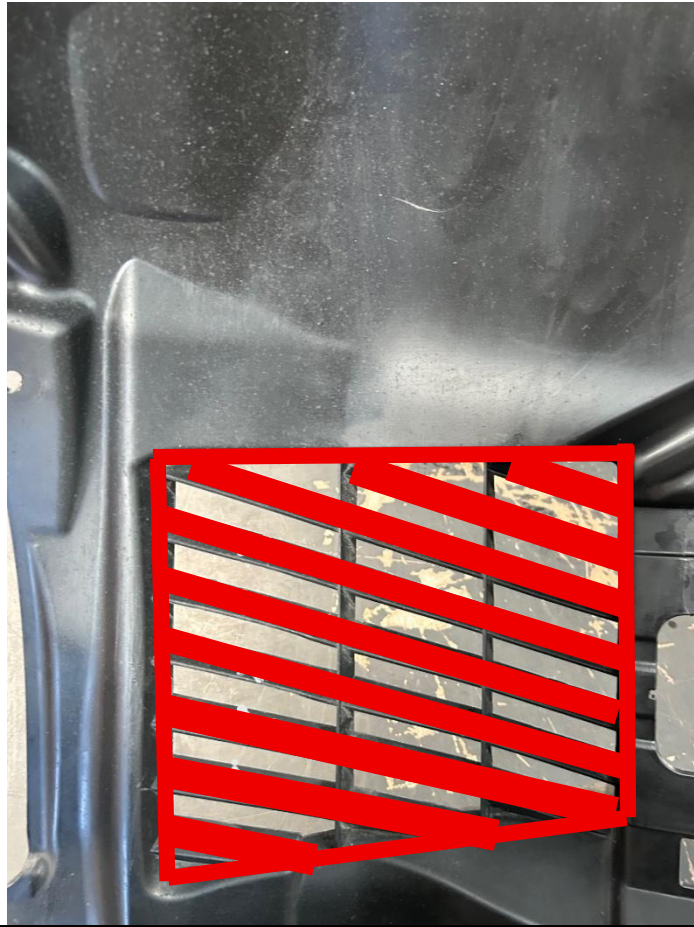


Photo #4

Cut out the perimeter shown

These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT step by step instructions on how to disassemble and reassemble the car.**

4. Before reinstalling the front liners, the final modification to the front is to sand down the small edge of the fender that protrudes out from the clamp that holds it to the bumper skin, just behind the headlight and by the wheel opening, See Photos # 6 and #7.



Photo #6

Sand down this part of the fender that sticks out from the clamp until its flush with the clamp

These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT** step by step instructions on how to disassemble and reassemble the car.



These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT** step by step instructions on how to disassemble and reassemble the car.

REAR MODIFICATIONS

5. Remove the left and rear fender liners, mark the outer edge of the liner as shown and cut out the part you have marked, Photo #8 and #9



Photo #8

Mark outer edge of rear fender liner as shown here.

These instructions assume that the person installing these parts is a **BRAND CERTIFIED MECHANIC** and are **NOT step by step instructions on how to disassemble and reassemble the car.**

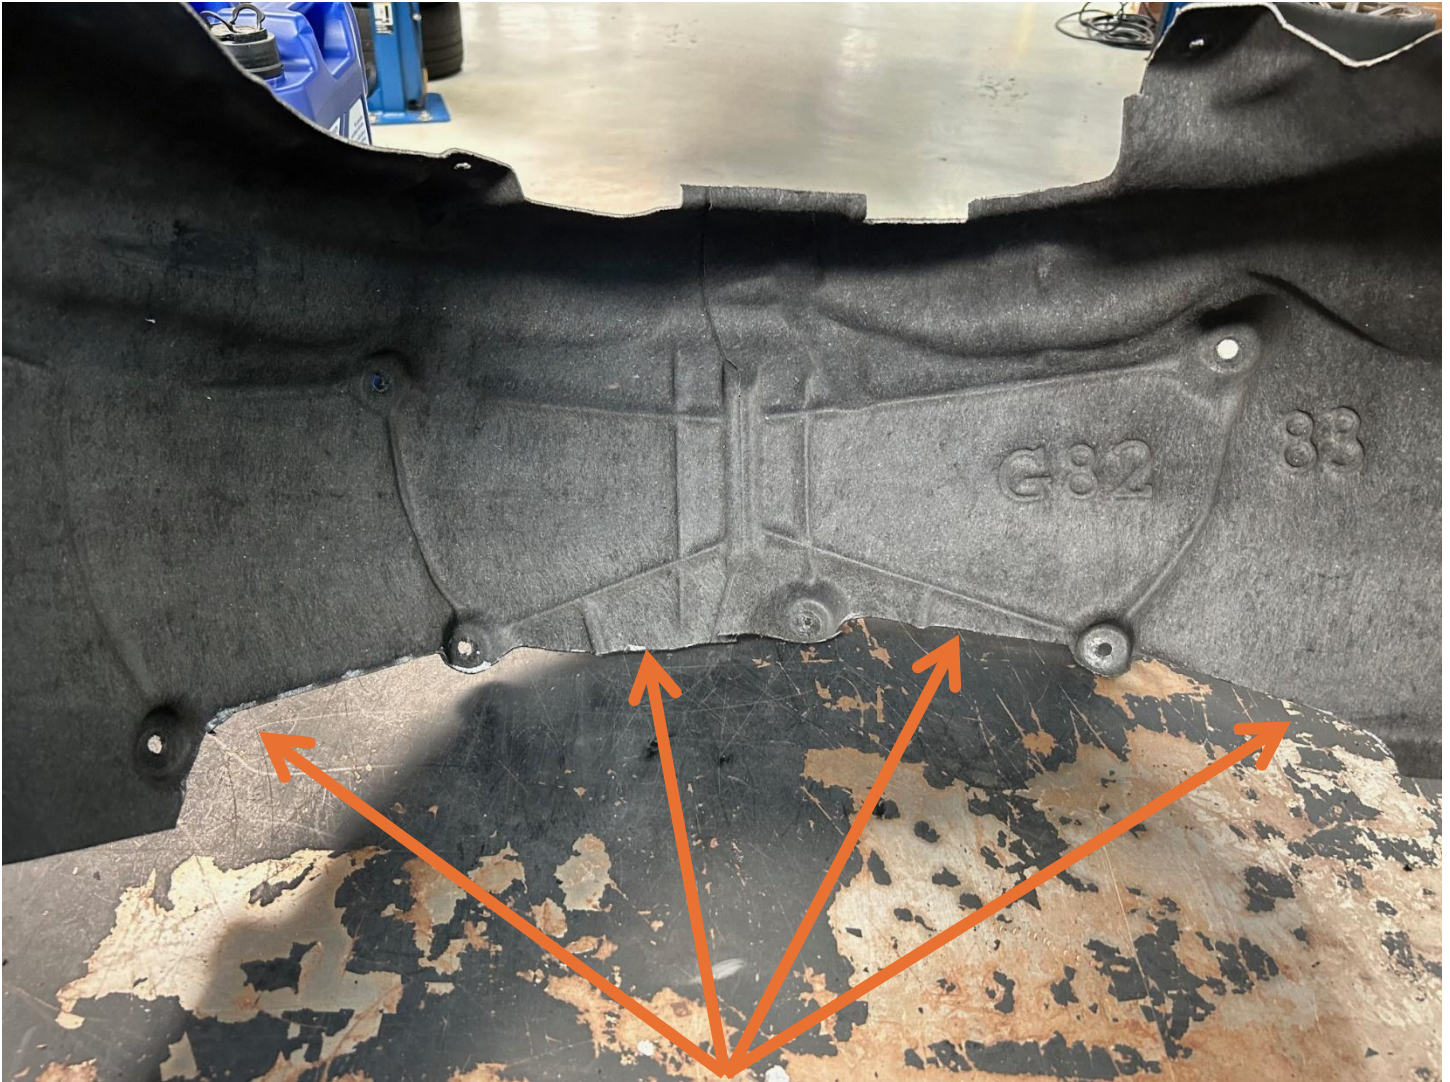


Photo #9

Rear fender liner after cutting.

6. Now all the liners can be reinstalled