



INSTALLATION INSTRUCTIONS

CARBAHN.COM/INSTRUCTIONS

Cold Air Intake Kit: X3 M40i / X4 M40i

CARBAHN PART #:

CBB01-00-6303



US Based Support

866-558-4314


Sales@CarBahn.com

CarBahn.com


Follow Us: [@CarBahnOfficial](https://www.instagram.com/CarBahnOfficial)

These instructions assume that the person installing these parts is a *BRAND CERTIFIED MECHANIC* and are *NOT* step by step instructions on how to disassemble and reassemble the car.

1. Remove passenger side stress brace.
2. Remove OEM airbox lid (1), refer to diagram below for the location of the screws. **These screws will need to be reused on the CarBahn Carbon Fiber Intake Lid.** To remove lid, air mass meter needs to be unplugged, and air hose needs to be disconnected.

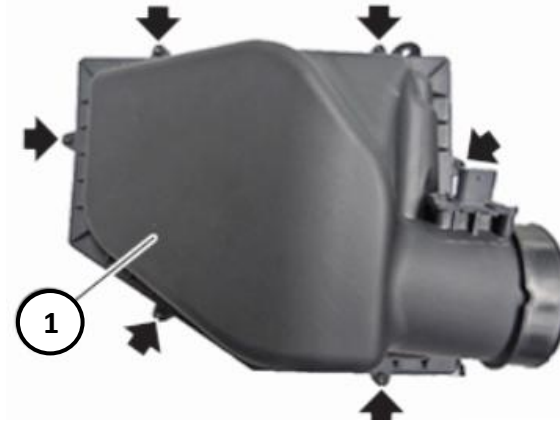

3. Once OEM Lid has been removed, Air mass meter (1) needs to be transferred from the OEM Lid (2) to the CarBahn intake lid. **You will be reusing the OEM hardware to transfer the sensor (3).**

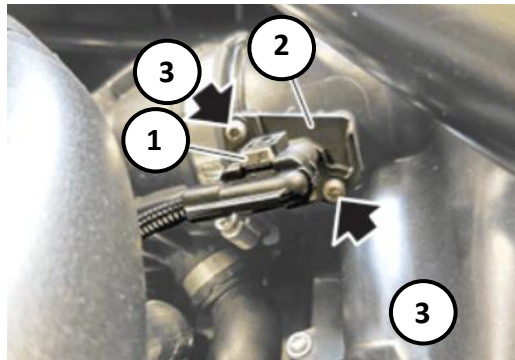

4. Install CarBahn intake lid on the car with the provided CarBahn high flow filter. Make sure you correctly install air hose/tighten clamp (**Not to exceed 3Nm**) and plug sensor back in (**Connector must engage audibly**).
5. Once everything has been installed correctly, proceed to reinstall stress brace (2). Torquing the screws (1) to **56Nm**.

